

ROHL

HOUSE OF ROHL

INSTRUCTION MANUAL
MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES

R51 EXT51KIT

1. Turn off stops and remove the cartridge. To remove your trim set, refer to original installation guide. 1. Turn off stops and remove the cartridge. To remove your trim set, refer to original installation guide. 1. Turn off stops and remove the cartridge. To remove your trim set, refer to original installation guide.

2. Install centering pins and new bottom cavity gasket into the extension. **3.** Install the new puck extension and the balancing spool and cartridge into place. **4.** Install cartridge nut housing by hand tightening and apply a 1/4 turn with a wrench. Do not overtighten.

2. Install centering pins and new bottom cavity gasket into the extension. **3.** Install the new puck extension and the balancing spool and cartridge into place. **4.** Install cartridge nut housing by hand tightening and apply a 1/4 turn with a wrench. Do not overtighten.

2. Install centering pins and new bottom cavity gasket into the extension. **3.** Install the new puck extension and the balancing spool and cartridge into place. **4.** Install cartridge nut housing by hand tightening and apply a 1/4 turn with a wrench. Do not overtighten.

**For warranty or additional
information, contact:**

INS12920 - Rev. 06/22

US Customers

houseofrohl.com/support

1-800-777-9762

Canadian Customers

houseofrohl.ca/support

1-866-473-8442

1-800-287-5354